


Deck chair Basic - seat surface
43.0 x 125.0 cm

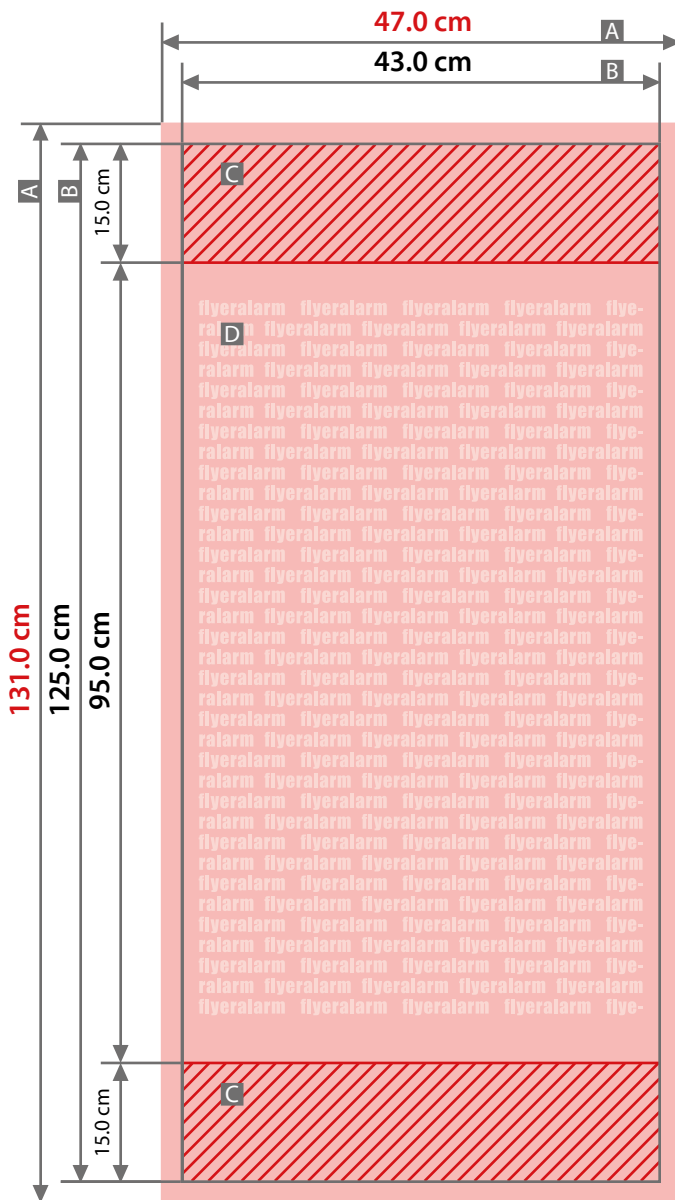


Our tip: Please wash the cover before the first use to remove excessive colours.

Sketches are not to scale

Seam allowance (x)
left / right: 2.0 cm
top / below: 3.0 cm

Safety distance (y)
left / right: 1.5 cm
top / below: 3.0 cm

- A = Artwork format
- B = Finished format
- C = Partially visible area (winding)
- D = Seat surface

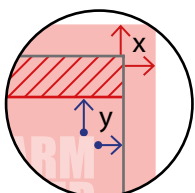

Assembly instructions

Deck chair



Max. load capacity approx. 110 kg

Scope of delivery



1 x Deck chair

Assembly instruction



1. Stand the folded chair vertically with the metal pins pointing upwards. Rotate the shorter arm with three cross bars downwards.



2. Afterwards please rotate the second arm with the cross brace downwards.



3. It has to snap into the selected position.



4. The chair offers three different seating- and lying positions.

Exchange of print



1. Remove the wooden poles from the top and bottom groove.



2. Pull out the wooden poles out of the seam of the old print and use them for the new print.



3. Push the upper seam incl. wooden poles into the upper groove and wrap the print around the bar once.



4. Now wrap the other end once around the lower bar loosely and push the seamed wooden pole also into the groove within the wrapping .

Our tip:

1. Please check the position and stability of the cross brace before the first use.
2. Only place the deck chair on flat surfaces.
3. Please do not expose the deck chair to bad weather and store it in a dry place.
4. Before washing the print please remove the wooden bars from the seam.

Care instructions: Wood discolouration may occur despite the stained wood. Therefore, claims for reasons of discolouration will not be accepted. This also applies in case of inappropriate use/treatment/storage. Wipe the wooden construction clean with a damp cloth. The fabric panel is fastened by means of a special system and can be removed without much effort.