


Display Roll-Up Comfort, 100 cm x 215 cm

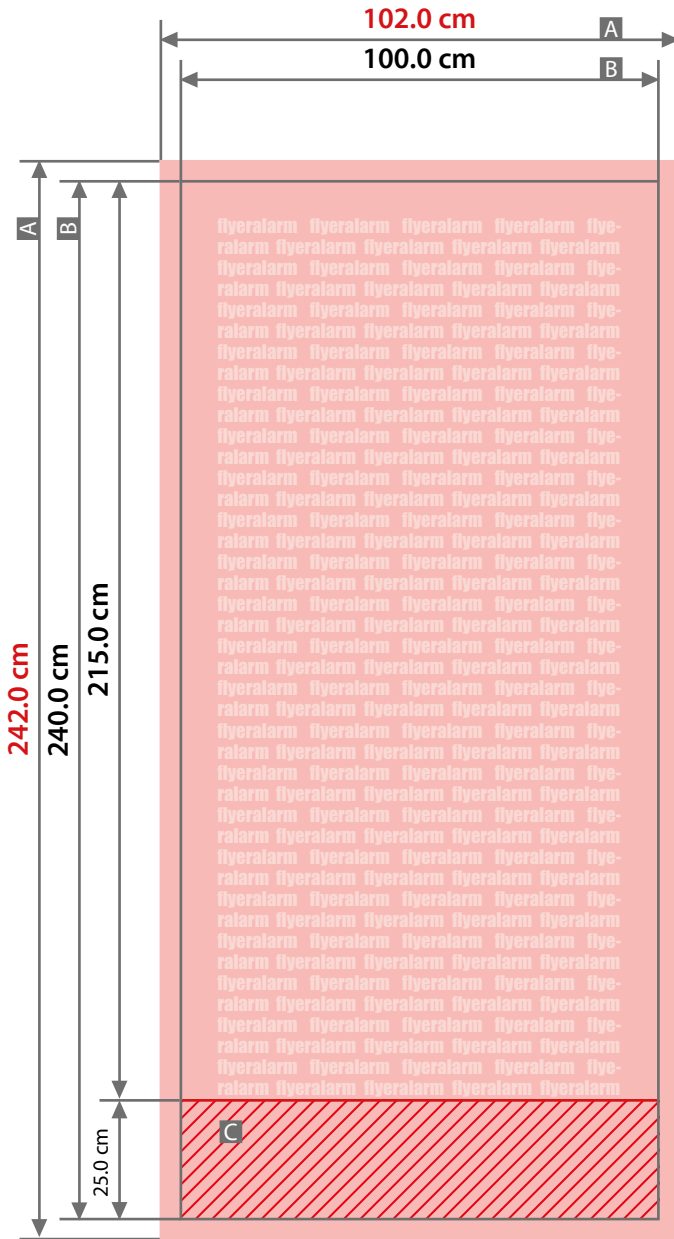

Sketches are not to scale


Bleed (x)
1.0 cm

Safety distance (z)
4.0 cm

A = Artwork format

B = Finished format

C = Not visible area

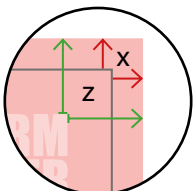

Assembly instructions

Display, Roll-Up Comfort



Scope of delivery



1 x Display system
1 x Carrying bag

For system with print please observe:
1 x banner print

Assembly



1. Open three-part pole and put it together.



2. Put pole in provided hole in housing.



3. Pull out banner from housing and position plastic spike central in the upper profile slot.




4. Done!


Tip: Stand behind the system and tilt the system backwards when pulling out the banner. The profile can then be attached more easily.

Assembly instructions of banner

1. Open the clamping strips and insert the upper end of the banner.
2. Fasten banner in clamping strip.
3. Peel off adhesive protection from the welting profile bit by bit and put on lower end of banner straightly.
4. Adjust banner and tightly press on adhesive strip.
5. Repeat mentioned steps with the yellow adhesive protection strip on the back of the welt and tightly press on the back of the banner.

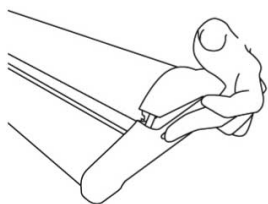


6. Open housing on both sides by pressing buttons and remove roll.

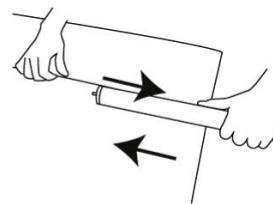


7. Insert banner sideways with lower welting profile into roll.


ATTENTION: Please pay attention to the UP sign!

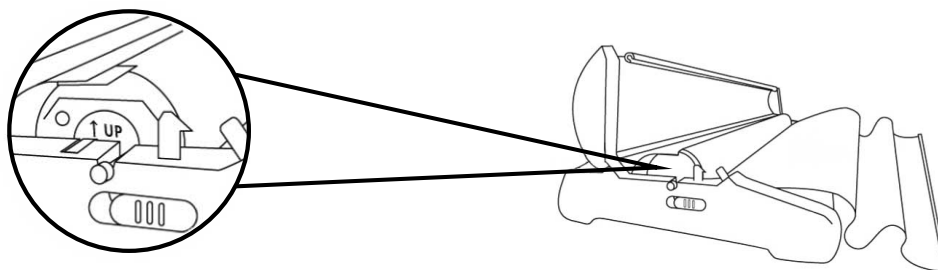

8. Insert roll with banner print in housing and leave rest of banner outside.

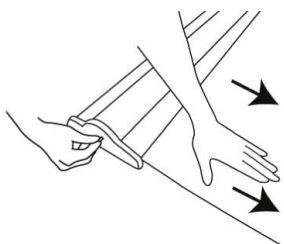

9. Close housing cover, hold banner and remove guard pin on the right side.

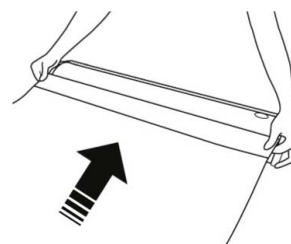

10. Let banner roll slowly into cassette.

Exchanging of banner

11. Pull out banner completely.
12. Put guard pin (can be found on the inside of closure cap of carrying bag) in the small hole on the right side and thereby secure the spring tension of the roll.
13. Exchange banner (see 1.-10.).